



E49-400T20D User Manual

433MHz DIP Wireless Module



CONTENTS

| | |
|--|-----------|
| 1. OVERVIEW | 3 |
| 1.1 INTRODUCTION | 3 |
| 1.2 FEATURES | 3 |
| 1.3 APPLICATION | 3 |
| 2. SPECIFICATION AND PARAMETER | 4 |
| 2.1 LIMIT PARAMETER | 4 |
| 2.2 OPERATING PARAMETER | 4 |
| 3. SIZE AND PIN DEFINITION | 5 |
| 4. CONNECT TO MCU | 6 |
| 5. FUNCTION DESCRIPTION | 7 |
| 5.1 MODULE RESET | 7 |
| 5.2 AUX DESCRIPTION | 7 |
| 5.2.1 Wireless receiving indication | 7 |
| 5.2.2 Wireless transmission indication | 7 |
| 5.2.3 Reset and exit sleep mode | 8 |
| 5.3.4 Notes for AUX | 8 |
| 5.3.5 Fixed-point mode description | 8 |
| 5.3.6 Broadcast transmission | 9 |
| 5.3.7 Broadcast address | 9 |
| 5.3.8 MONITOR ADDRESS | 9 |
| 6. OPERATING MODE | 10 |
| 6.1 MODE SWITCHING | 10 |
| 6.2 TRANSMISSION MODE (MODE 0) | 11 |
| 6.3 RSSI MODE (MODE 1) | 11 |
| 6.4 SETTING MODE (MODE 2) | 11 |
| 6.5 SLEEP MODE (MODE 3) | 12 |
| 6.6 FAST COMMUNICATION TEST | 12 |
| 7. COMMAND FORMAT | 13 |
| 7.1 FACTORY DEFAULT PARAMETER | 13 |
| 7.2 READING OPERATING PARAMETER | 14 |
| 7.3 VERSION NUMBER READING | 14 |
| 7.4 PARAMETER SETTING COMMAND | 14 |

| | |
|--|-----------|
| 8. HARDWARE DESIGN | 16 |
| 9. FAQ | 17 |
| 9.1 COMMUNICATION RANGE IS TOO SHORT | 17 |
| 9.2 MODULE IS EASY TO DAMAGE | 17 |
| 9.3 BER(BIT ERROR RATE) IS HIGH | 17 |
| 10. WELDING GUIDANCE | 18 |
| 10.1 REFLOW SOLDERING TEMPERATURE | 18 |
| 10.2 REFLOW SOLDERING CURVE | 18 |
| 11. RELATED MODEL | 19 |
| 12. ANTENNA GUIDANCE | 19 |
| 12.1 ANTENNA RECOMMENDATION | 19 |
| 13. BATCH PACKAGING | 19 |
| REVISION HISTORY | 19 |
| ABOUT US | 20 |


1. Overview

1.1 Introduction

E49-400T20D is an ultra-high cost-effective wireless module developed by Chengdu Ebyte. There are 4 operating modes. Each transmission mode has its own characteristics and can be applied to various application scenarios. E49-400T20D perfectly supports industrial-grade applications, and undergoes rigorous testing at factory to ensure its industrial reliability and batch consistency.

E49-400T20D supports a maximum transmission power of 20dBm. Users can set a lower output power to save power consumption. The module works at 433MHz, with TTL level output, and is compatible with 3.3V.

The module has data encryption function. The data transmitted by the module in the air is random. Through strict encryption and decryption algorithms, the data interception is meaningless, the probability of interference is reduced, and the reliability and transmission efficiency are improved. Besides, it is a low-cost wireless serial transceiver module.

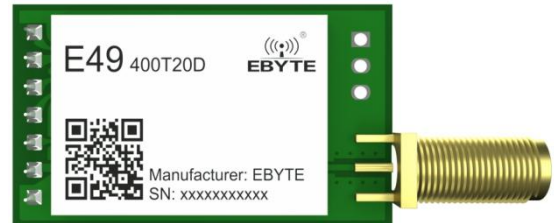

1.2 Features

- The measured communication distance is up to 1km;
- Maximum transmit power is 100mW, software can be adjusted at multiple levels;
- The global license-free ISM 433MHz frequency band;
- Data transmission rate :1.2Kbps~200Kbps;
- Low power consumption mode, suitable for battery application;
- Advanced ultra-narrowed GFSK modulation;
- 2.6V~5.5V power supply;
- Industrial-grade standard design for long-term use of -40 ~ 85°C;
- SMA antenna interface.

1.3 Application

- Wearable devices;
- Smart home and industrial sensors;
- Security system, Positioning system;
- Wireless remote control, unmanned drone;
- Wireless game remote control;
- Health care product;
- Wireless voice, wireless headphones;
- Automobile industry application.

2. Specification and parameter

2.1 Limit parameter


| Main parameter | Performance | | Remark |
|----------------------------|-------------|------|---|
| | Min. | Max. | |
| Power supply (V) | 0 | 5.5 | Voltage over 5.5V will cause permanent damage to the module |
| Blocking power (dBm) | - | 10 | Chances of burn is slim when modules are used in short distance |
| Operating temperature (°C) | -40 | +85 | |

2.2 Operating parameter

| Main parameter | | Performance | | | Remark |
|-----------------------------|--------------------|-------------|------|------|---|
| | | Min. | Typ. | Max. | |
| Operating voltage (V) | | 2.6 | 5 | 5.5 | Voltage over 5.5V will cause permanent damage to the module |
| Communication level (V) | | | 3.3 | | |
| Operating temperature (°C) | | -40 | - | +85 | Industrial design |
| Operating frequency (MHz) | | 410 | 433 | 510 | Support ISM band |
| Power consumption | TX current (mA) | | 75 | | Instant power consumption |
| | RX current (mA) | | 12 | | |
| | Sleep current (μA) | | 0.7 | | Software is shut down |
| Max Tx power (dBm) | | - | - | 20.0 | |
| Receiving sensitivity (dBm) | | -116 | -117 | -117 | Air data rate is 1.2kbps |
| Air data rate (bps) | | 1.2k | 2.4k | 200k | Controlled via user's programming |

| Main parameter | Description | Remark |
|-------------------------|-------------------|---|
| Distance for reference | 1000m | Test condition: clear and open area, antenna gain: 5dBi, antenna height: 2.5m, air data rate: 1.2kbps |
| Sub-packet | 54 Byte | The maximum capacity of a single package is automatically packed after exceeding. |
| Buffer | 500 Byte | |
| Modulation | GFSK | |
| Communication interface | UART | |
| Package | DIP | |
| Connector | 2.54mm pin header | |
| Size | 36*21mm | |
| Antenna | SMA | 50 ohm impedance |

3. Size and pin definition

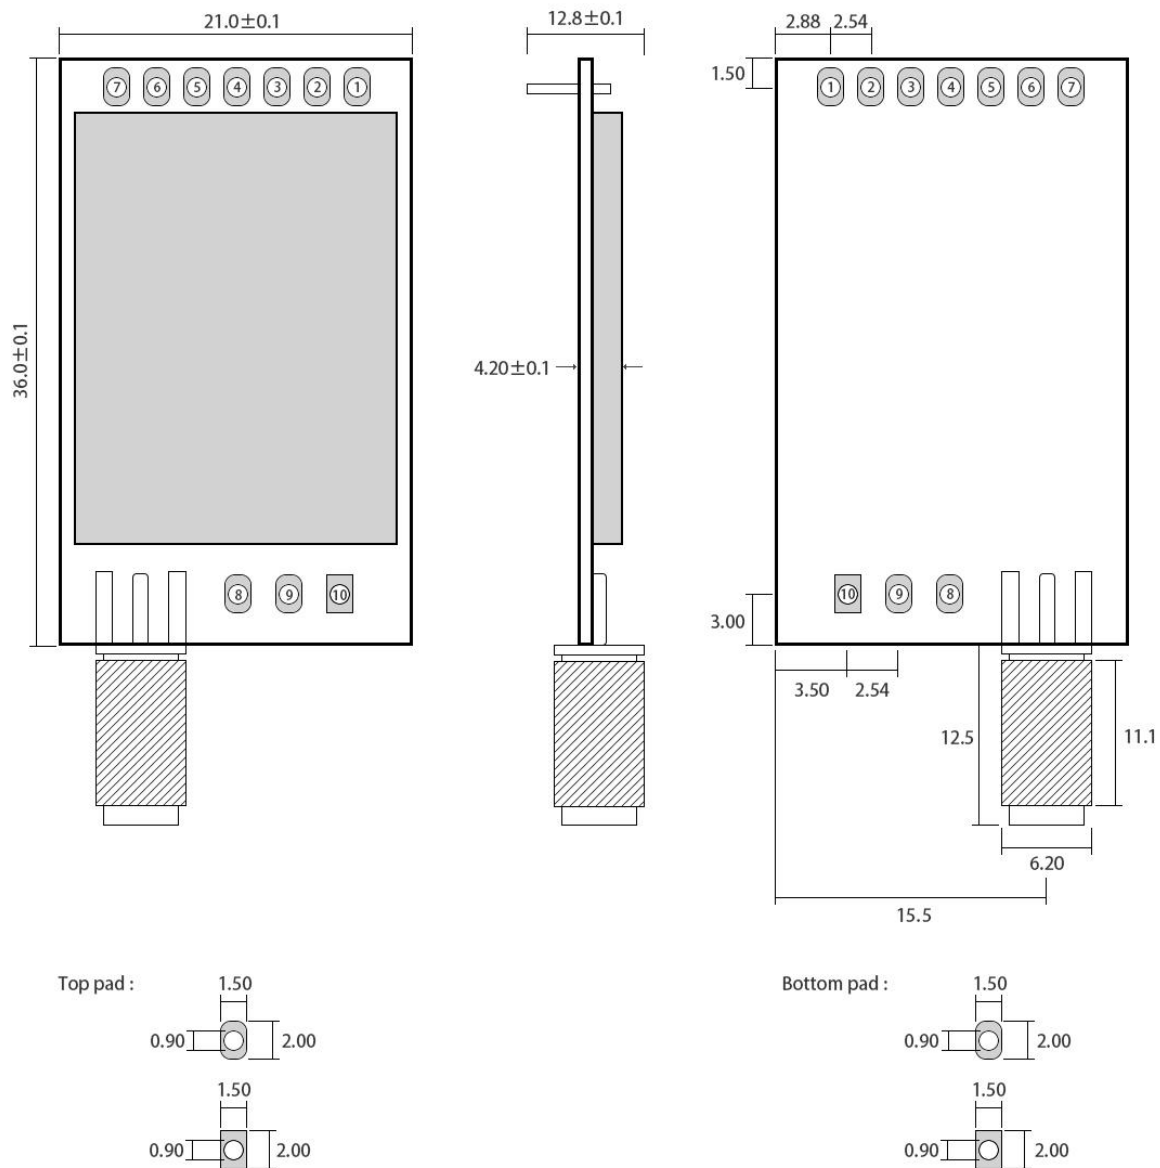


Pad quantity : 10
Unit: mm

| Pin No. | Pin item | Pin direction | Application |
|---------|----------|-------------------------|---|
| 1 | M0 | Input (weak pull-up) | Work with M1 to decide 4 working modes of module (can be suspended, internal pull-up resistor). |
| 2 | M1 | Input (weak pull-up) | Work with M0 to decide 4 working modes of module (can be suspended, internal pull-up resistor). |
| 3 | RXD | Input | TTL UART input, connects to external TXD output pin. |

| | | | |
|----|-----|--------|---|
| 4 | TXD | Output | TTL UART output, connects to external RXD input pin. |
| 5 | AUX | Output | To indicate module 's working status & wakes up the external MCU. During the procedure of self-check initialization, the pin outputs low level. |
| 6 | VCC | | Module power supply positive reference, voltage range: 2.6V ~ 5.5V DC |
| 7 | GND | | Ground |
| 8 | GND | | Ground |
| 9 | GND | | Ground |
| 10 | GND | | Ground |

4. Connect to MCU

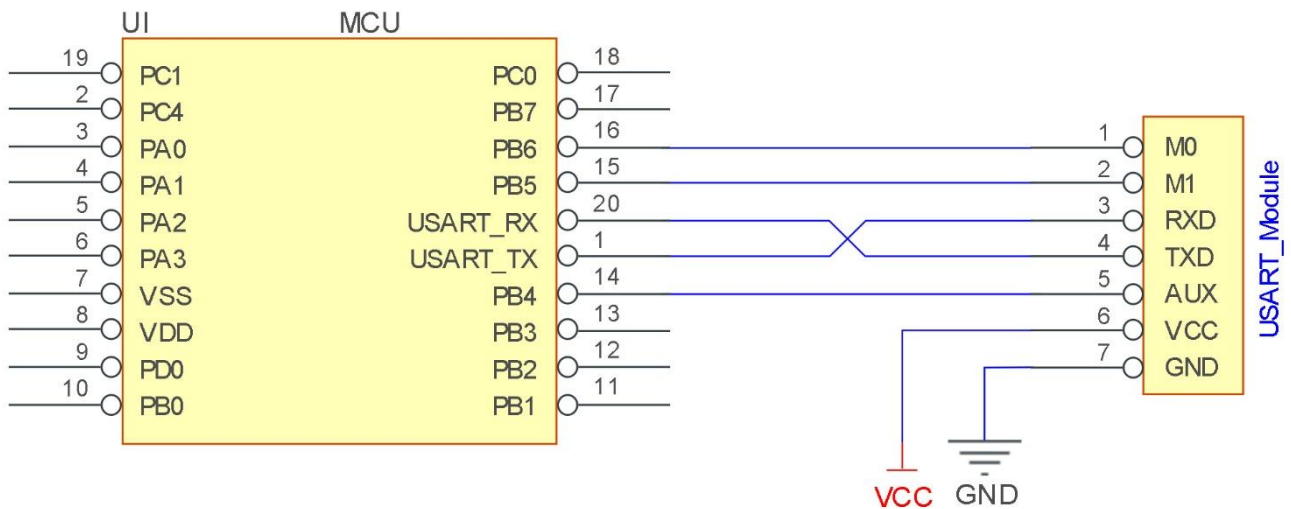

| No. | Description (STM8L MCU) |
|-----|---|
| 1 | The UART module is TTL level, please connect with TTL level MCU. |
| 2 | For some MCU works at 5V DC, it may need to add 4~10K pull-up resistor for the TXD & AUX pin. |

5. Function description

5.1 Module reset

When the module is powered on, AUX outputs low level immediately, conducts hardware self-check and sets the operating mode based on user's parameters. During the process, the AUX remains low level. After the process completed, the AUX outputs high level and starts to work as the operating mode combined by M1 and M0. Therefore, users need to wait the AUX rising edge as the start of module's normal work.


5.2 AUX description

AUX P is used as indication for wireless sending & receiving buffer and self-check.

It can indicate whether there are data that are not sent yet via wireless way, or whether all wireless data has been sent through UART, or whether the module is still in the process of self-check initialization.


5.2.1 Wireless receiving indication

After receiving the valid wireless data, the module will immediately pull AUX low and start UART to output data and then pull up AUX after the data output is completed.

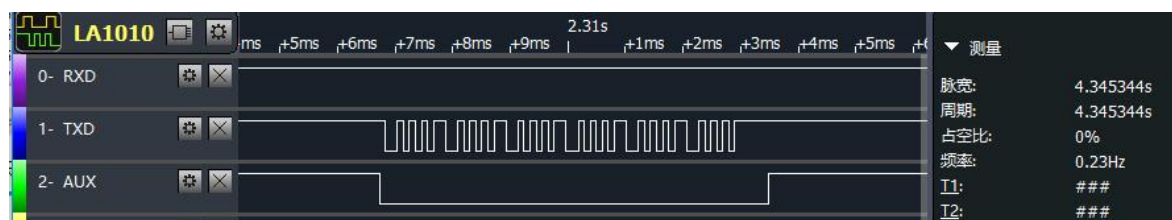

5.2.2 Wireless transmission indication

After receiving the serial port data, the module will immediately pull down AUX and start sending data wirelessly and after all the data is sent, pull up AUX.

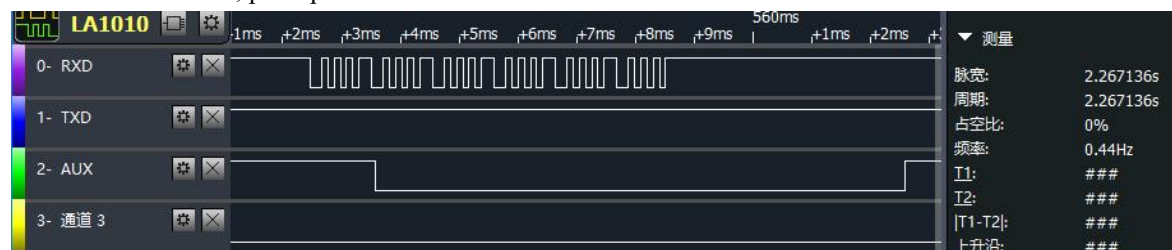

5.2.3 Reset and exit sleep mode

Only when resetting and exiting sleep mode



Timing Sequence Diagram of AUX when self-check


5.3.4 Notes for AUX

The function 1 and function 2 mentioned above have low output priority, that is, if any output low condition is met, AUX outputs a low level; when all low level conditions are not met, AUX outputs a high level.


When the AUX output is low, it indicates that the module is busy, and the operating mode detection will not be performed; when the AUX output is high, the mode switching will be completed.

When users enter other modes from mode 3 (sleep mode) or during the reset process, the module will reset user parameters, during which AUX outputs low level.

5.3.5 Fixed-point mode description

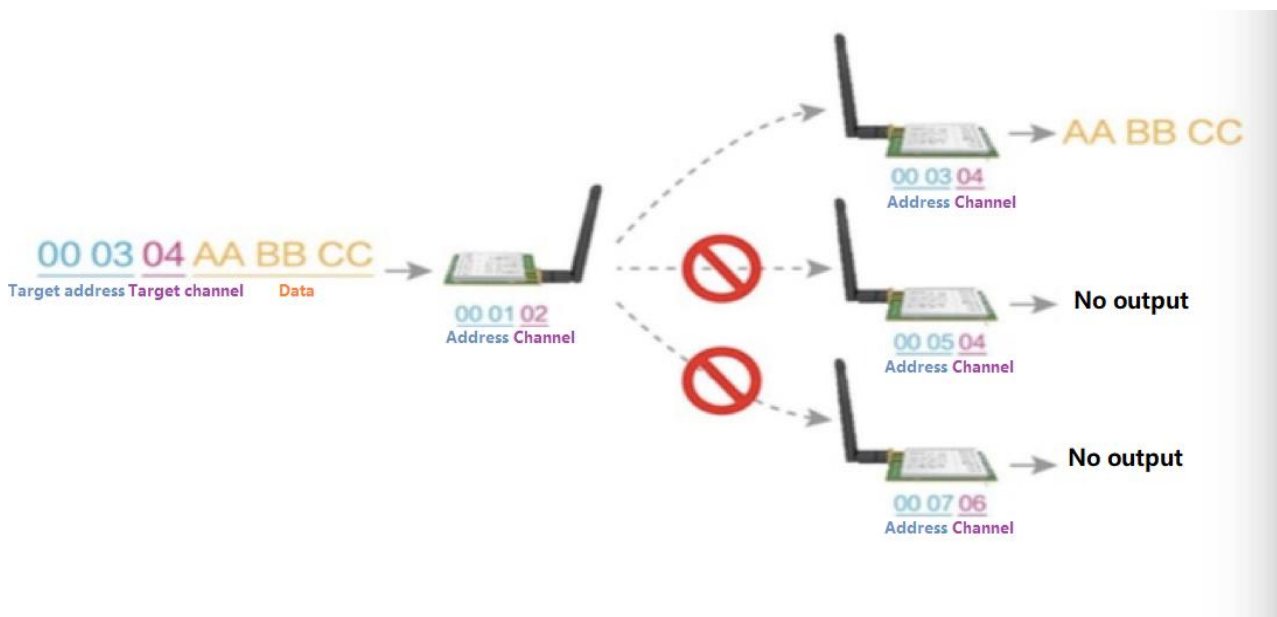

5.3.6 Broadcast transmission

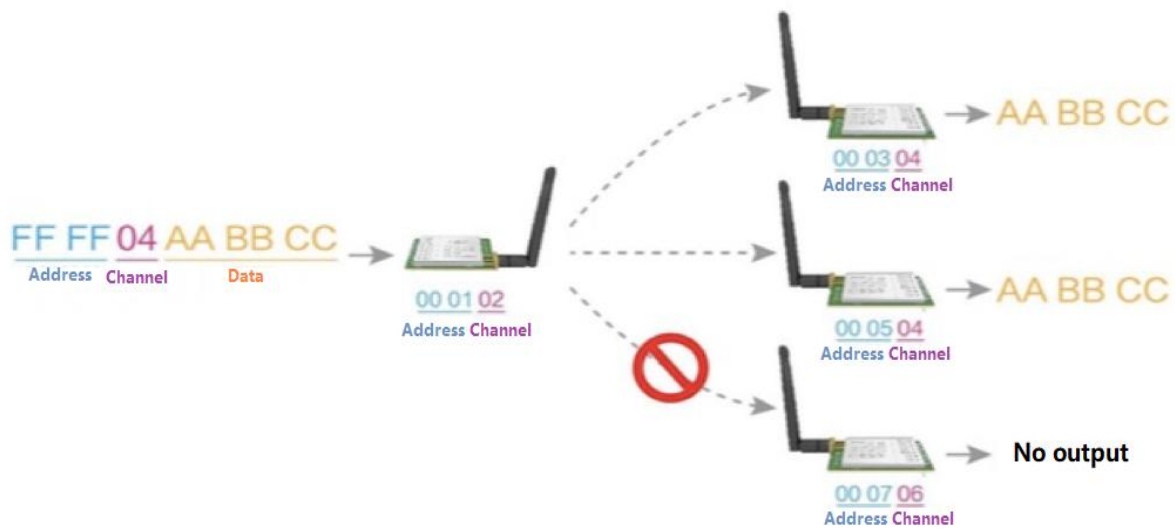

5.3.7 Broadcast address

Example:

- Set the address of module A to `0xFFFF` and the channel to `0x04`
- When module A is used for transmission (same mode, transparent transmission mode), all receiving module under the `0x04` channel can receive data to achieve the purpose of broadcasting.

5.3.8 Monitor Address

Example: Set the address of module A to `0xFFFF` and the channel to `0x04`. When module A is used as a receiver, it can receive all the data under the `0x04` channel to achieve the purpose of monitoring.

6. Operating mode

There are four operating modes, which are set by M1 and M0, the details are as follows:

| Mode(0-3) | M1 | M0 | Description | Remark |
|---------------------|----|----|--|---|
| 0 Transmission mode | 0 | 0 | UART and wireless channel are open, the module performs data transmission according to the set transmission mode | The transmission method of the sender and receiver must be consistent |
| 1 RSSI mode | 0 | 1 | Wireless off and UART opens, the module outputs RSSI signal strength value at 100ms timing | Relative intensity values only |
| 2 Setting mode | 1 | 0 | Wireless off, can receive UART command, refer to Command List, fixed baud rate is 9600, 8N1 | Parameter configuration |
| 3 Sleep mode | 1 | 1 | The module goes to sleep standby mode, and the serial UART and wireless are turned off. | Ultra-lower power consumption sleep |

6.1 Mode switching

- Users can combine M0 and M1 with high and low levels to determine the operating mode of the module. Users can use the MCU's 2 GPIOs to control the node switching; after changing M0,M1: the module is idle and after 1ms, it can start working according to the new operating mode; if the module has not transmitted serial port data via wireless, then entering the new operating mode after the transmission completed; if the module receives the wireless data and sends out the data through the serial port, it needs to finish sending before entering the new operating mode; if the module; so the mode switching can only be effective when AUX outputs 1, otherwise the switch will be delayed.
- For example: In mode 0, the user continuously inputs a large amount of data and switches the mode at the same time. The mode switching operation is invalid at this time; the module will process all the user data before performing the new mode detection; so the general recommendation is: Detect the AUX pin output status, wait for 2ms after the AUX output goes high before switching.
- When the module is switched from other modes to sleep mode, if any data has not been processed, the module will enter the sleep mode after processing the data(including receiving and sending). This feature can be used for fast sleep mode to save power consumption; for example: the transmitter module works in mode0, the user initiates serial data "12345",and then does not have to wait for the AUX pin to be idle (high level),and can directly switch to sleep mode, And the user's main MCU will immediately sleep, the module will automatically send all user data through wireless, and automatically enter sleep within 1ms; thus saving the MCU's working time and reducing power consumption.
- Similarly, any mode switch can use this feature. After processing the current mode event, the module will automatically enter the new mode within 1ms; thereby eliminating the user's query of AUX and achieving the goal of fast switching ,For example, switching from the transmission mode to the setting mode; the user MCU can also go to sleep mode in advance before the mode switching, and use the external interrupt function to obtain the AUX change to perform the mode switching.
- This operation mode is very flexible and efficient. It is designed in accordance with the convenience of the user MCU, and can reduce the workload of the entire system as much as possible, improve system efficiency and reduce power consumption.

6.2 Transmission mode (Mode 0)

| Type | M0 = 0, M1 = 0 |
|--------------|--|
| Transmitting | <p>The module receives user data from the serial port, the maximum length of the wireless data packet transmitted by the module is 54 bytes, when the amount of user input data reaches 54 bytes, the module will start wireless transmission. At this time, the user can continue to enter the data that needs to be transmitted.</p> <p>When the user needs to transmit less than 54 bytes, the module waits for about 20ms. If there is no user data to continue to input, the data is considered to be terminated. At this time, the module sends all data via wireless.</p> <p>When the module receives the first user data, AUX outputs low level. When the module puts all data into the RF chip and starts transmitting, AUX outputs high level.</p> <p>At this point, it indicates that the last packet of wireless data has been transmitted, and the user can continue to enter data.</p> <p>Data packets sent through mode 0 can only be received by the receiving module in mode 0.</p> |
| Receiving | <p>The module is on the wireless receiving function all the time and can receive data packets from mode 0.</p> <p>After receiving the data packet and the module AUX outputs a low level, it starts sending wireless data through the serial port TXD pin. After all wireless data is output through the serial port, the module outputs AUX high level.</p> |

6.3 RSSI Mode (Mode 1)

| Type | M0 = 1, M1 = 0 |
|--------------|---|
| Transmitting | No wireless transmission is allowed, the received serial data will be discarded. |
| Receiving | <p>Can not receive air wireless data, only scan the signal strength of the current channel, and output a strength value (relative value) through the serial port every 100ms.</p> <p>Numerical calculation method: signal strength = -(256 (decimal)-data (decimal)) dBm</p> <p>If the hexadecimal value output by the serial port is 0x91, the actual signal strength is: -(256 (decimal)-145 (decimal)) = -111dBm</p> |

6.4 Setting Mode (Mode 2)


| Type | M0 = 0, M1 = 1 |
|---------------|--|
| transmitting | No wireless transmission is allowed, the received serial data will be discarded. |
| receiving | Unable to receive wireless data |
| configuration | Can be used for module parameter setting, use serial port 9600, 8N1, set module working parameters according to specific instruction format |
| Note | <p>When entering from the setting mode to other modes, the module will reconfigure the parameters. During the configuration, AUX remains low level;</p> <p>It outputs a high level after finished, so it is recommended that the user detect the rising edge of AUX.</p> |


6.5 Sleep Mode (Mode 3)

| Type | M0 = 1, M1 = 1 |
|--------------|---|
| transmitting | Unable to transmit wireless data |
| receiving | Unable to receive wireless data |
| others | When the module is in the ultra-low power consumption state, all other functions of are turned off, and the sleep mode can only be exited through the state switch of M1M0. |

6.6 Fast communication test

| Step | Description |
|------|--|
| 1 | Connect E49-400T20D module to the E49-TBL backplane, and then plug into the USB test board (E15-USB-T2), plug into the computer to ensure that the driver has been installed correctly; Plug in the mode selection jumper cap on the USB test board (M1 = 0, M0 = 0) |
| 2 | Select 3.3V (the module supports 2.6 ~ 3.3V). |
| 3 | Run the "Serial Debug Assistant" software and select the correct serial port number and observe the sending window and the corresponding receiving window |

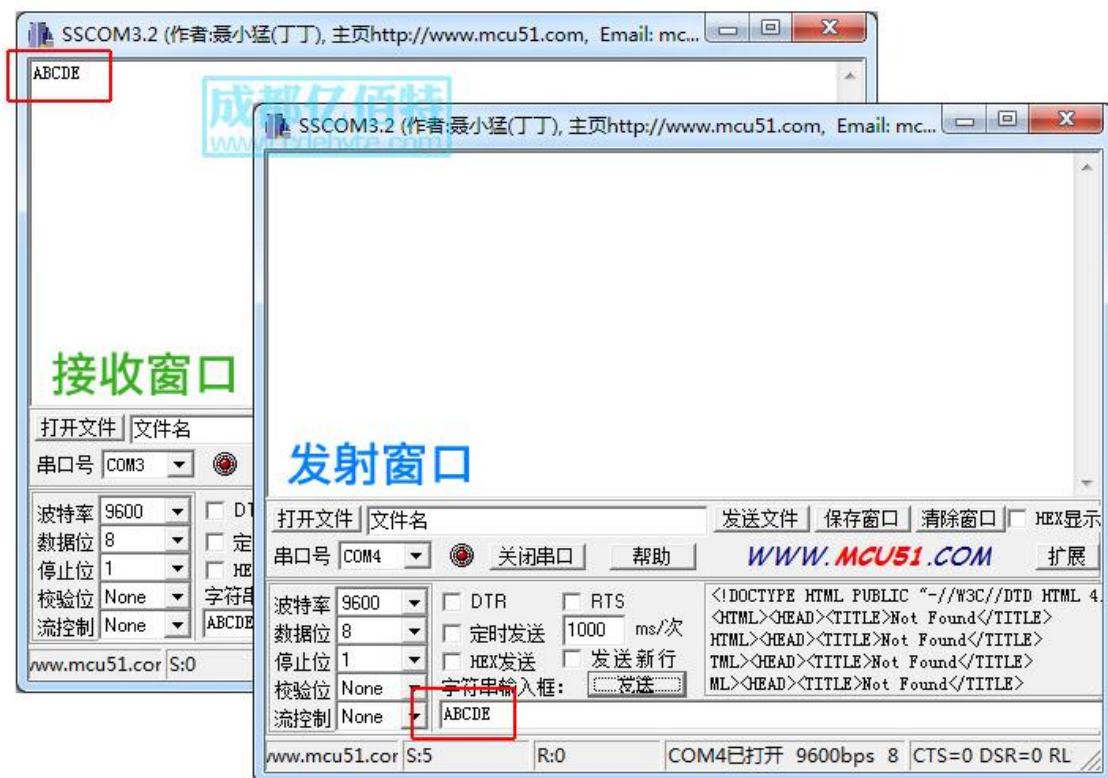

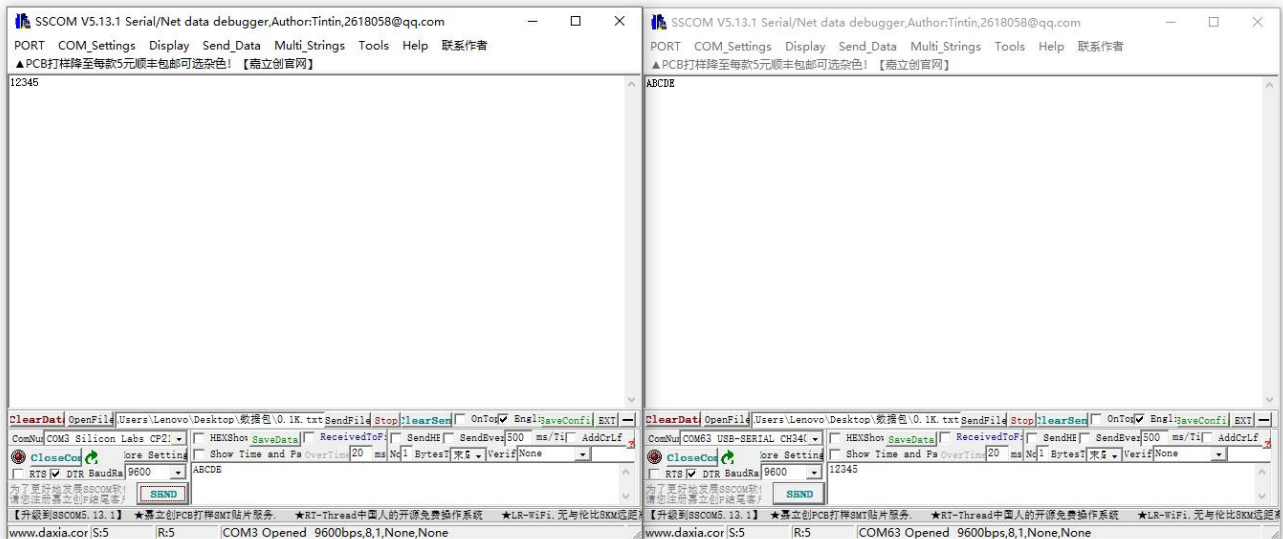

7. Command format

Command mode (Mode 2: M0 = 0, M1 = 1), the list of supported commands is as follows (when set, only 9600, 8N1 format is supported):

| No. | Command format | Description |
|-----|------------------------|---|
| 1 | C0+operating parameter | Send C0 + 5 byte working parameters in hexadecimal format, a total of 6 bytes and must be sent continuously (save when power off) |
| 2 | C1+C1+C1 | Send three C1s in hexadecimal format. The module returns the saved parameters and must be sent continuously. |
| 3 | C2+operating parameter | Send C2 + 5 bytes working parameter in hexadecimal format, a total of 6 bytes and must be sent continuously(do not save when power off) |
| 4 | C3+C3+C3 | Send three C3s in hexadecimal format. The module returns version information and must be sent continuously. |

7.1 Factory default parameter

| Model | Factory default parameter value: C0 00 00 19 2E 00 | | | | | |
|-------------|--|---------|---------|----------|-----------|--------------------|
| Module type | Frequency | Address | Channel | Air rate | Baud rate | Transmitting power |
| E49-400T20D | 433MHz | 0x0000 | 0x2E | 2.4kbps | 9600 | 20 |

7.2 Reading operating parameter

| Command format | Description |
|----------------|--|
| C1+C1+C1 | In the setting mode (M0 = 0, M1 = 1), issue a command to the module serial port (HEX format): C1 C1 C1, The module will return the current configuration parameters, such as: C0 00 00 18 20 00 |

7.3 Version number reading

| Command format | Description |
|----------------|--|
| C3+C3+C3 | In the setting mode (M0 = 0, M1 = 1), issue a command to the module serial port (HEX format): C3 C3 C3, The module will return the current configuration parameters, such as: C3 49 xx yy; 49 here represents the module model (E49 series), xx is the version number, and yy refers to other features of the module (users can ignore). |

7.4 Parameter setting command

| No. | Item | Description | Remark |
|-----|------|---|---|
| 0 | HEAD | Fixed 0xC0 or 0xC2, it means this frame data is control command | <ul style="list-style-type: none"> Must be 0xC0 or 0xC2 C0: Save the parameters when power off C2: Do not save the parameters when power off |
| 1 | ADDH | High address byte of module (default 00H) | 00H-FFH |
| 2 | ADDL | Low address byte of module (default 0H) | 00H-FFH |
| 3 | SPED | Rate parameters, including serial rate and air rate 7, 6: Serial parity bit 00: 8N1(default) 01: 8O1 10: 8E1 11: 8N1 ----- 5, 4, 3 TTL serial speed (bps) 000: Serial baud rate is 1200 001: The serial port baud rate is 2400 010: The serial port baud rate is 4800 011: Serial baud rate is 9600 (default) 100: The serial port baud rate is 19200 101: Serial baud rate is 38400 110: Serial baud rate is 57600 111: Serial baud rate is 115200 ----- 2, 1, 0 Wireless air data rate (bps) 000: Air data rate is 1.2k 001: Air data rate is 2.4k (default) 010: Air data rate is 4.8k | ----- UART baud rate can be different between communication parties The UART baud rate has nothing to do with wireless transmission parameters & won't affect the wireless transmit / receive features. ----- <ul style="list-style-type: none"> The lower the air data rate, the longer |

| | | | |
|---|--------|--|--|
| | | 011: Air data rate is 9.6k 100: Air data rate is 19.2k 101: Air data rate is 50k 110: Air data rate is 100k 111: Air data rate is 200k | the transmitting distance, better anti-interference performance and longer transmitting time <ul style="list-style-type: none"> The air data rate must keep the same for both communication parties. |
| 4 | CHAN | 7, 6, 5, 4, 3, 2, 1, 0 Communication channel Communication frequency (410M + CHAN * 0.5M) (Default 0x2E: 433M) | <ul style="list-style-type: none"> 00H-C8H, correspond to 410~510 MHz |
| 5 | OPTION | 7, Fixed transmission enabling bit (similar to MODBUS) 0: Transparent transmission mode 1: Fixed transmission mode 6, 5, 4, 3, 2 Reserved bit, write 0 1, 0 Transmission power (approximation) 00: 20 dBm (default) 01: 17 dBm 10: 14 dBm 11: 10 dBm | <ul style="list-style-type: none"> In fixed transmission mode, the first three bytes of each user's data frame can be used as high/low address and channel. The module changes its address and channel when transmit. And it will revert to original setting after complete the process. The external power must make sure the ability of current output more than 100mA and ensure the power supply ripple within 100mV. Low power transmission is not recommended due to its low power supply efficiency. |

For example: The meaning of No.3 "SPED" byte:

| | | | | | | | | |
|----------------------------|---------------------|---|------------------------|---|---|--------------------|---|---|
| The binary bit of the byte | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Configured by users | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 1 |
| Meaning | UART parity bit 8N1 | | UART baud rate is 9600 | | | Air data rate 2.4k | | |
| Corresponding hexadecimal | 1 | | | | 9 | | | |

8. Hardware design

- It is recommended to use a DC stabilized power supply. The power supply ripple factor is as small as possible, and the module needs to be reliably grounded.;
- Please pay attention to the correct connection of the positive and negative poles of the power supply. Reverse connection may cause permanent damage to the module;
- Please check the power supply to ensure it is within the recommended voltage otherwise when it exceeds the maximum value the module will be permanently damaged;
- Please check the stability of the power supply, the voltage can not be fluctuated frequently;
- When designing the power supply circuit for the module, it is often recommended to reserve more than 30% of the margin, so the whole machine is beneficial for long-term stable operation.;
- The module should be as far away as possible from the power supply, transformers, high-frequency wiring and other parts with large electromagnetic interference.;
- High-frequency digital routing, high-frequency analog routing, and power routing must be avoided under the module. If it is necessary to pass through the module, assume that the module is soldered to the Top Layer, and the copper is spread on the Top Layer of the module contact part(well grounded), it must be close to the digital part of the module and routed in the Bottom Layer;
- Assuming the module is soldered or placed over the Top Layer, it is wrong to randomly route over the Bottom Layer or other layers, which will affect the module's spurs and receiving sensitivity to varying degrees;
- It is assumed that there are devices with large electromagnetic interference around the module that will greatly affect the performance. It is recommended to keep them away from the module according to the strength of the interference. If necessary, appropriate isolation and shielding can be done;
- Assume that there are traces with large electromagnetic interference (high-frequency digital, high-frequency analog, power traces) around the module that will greatly affect the performance of the module. It is recommended to stay away from the module according to the strength of the interference. If necessary, appropriate isolation and shielding can be done.
- If the communication line uses a 5V level, a 1k-5.1k resistor must be connected in series (not recommended, there is still a risk of damage);
- Try to stay away from some physical layers such as TTL protocol at 2.4GHz , for example: USB3.0;
- The mounting structure of antenna has a great influence on the performance of the module. It is necessary to ensure that the antenna is exposed, preferably vertically upward. When the module is mounted inside the case, use a good antenna extension cable to extend the antenna to the outside;
- The antenna must not be installed inside the metal case, which will cause the transmission distance to be greatly weakened.

9. FAQ

9.1 Communication range is too short

- The communication distance will be affected when obstacle exists.
- Data lose rate will be affected by temperature, humidity and co-channel interference.
- The ground will absorb and reflect wireless radio wave, so the performance will be poor when testing near ground.
- Sea water has great ability in absorbing wireless radio wave, so performance will be poor when testing near the sea.
- The signal will be affected when the antenna is near metal object or put in a metal case.
- Power register was set incorrectly, air data rate is set as too high (the higher the air data rate, the shorter the distance).
- The power supply low voltage under room temperature is lower than 2.5V, the lower the voltage, the lower the transmitting power.
- Due to antenna quality or poor matching between antenna and module.

9.2 Module is easy to damage

- Please check the power supply to ensure that it is between the recommended power supply voltage. If the maximum value is exceeded, the module will be permanently damaged.
- Please check the stability of power source, the voltage cannot fluctuate too much.
- Please make sure anti-static measure are taken when installing and using, high frequency devices have electrostatic susceptibility.
- Please ensure the humidity is within limited range, some parts are sensitive to humidity.
- Please avoid using modules under too high or too low temperature.

9.3 BER(Bit Error Rate) is high


- There are co-channel signal interference nearby, please be away from interference sources or modify frequency and channel to avoid interference;
- Poor power supply may cause messy code. Make sure that the power supply is reliable.
- The extension line and feeder quality are poor or too long, so the bit error rate is high;

10. Welding guidance

10.1 Reflow Soldering Temperature

| Profile Feature | Curve feature | Sn-Pb Assembly | Pb-Free Assembly |
|---|-----------------------------------|----------------|------------------|
| Solder Paste | Solder paste | Sn63/Pb37 | Sn96.5/Ag3/Cu0.5 |
| Preheat Temperature min (T _{smin}) | Minimum preheating temperature | 100°C | 150°C |
| Preheat temperature max (T _{smax}) | Maximum preheating temperature | 150°C | 200°C |
| Preheat Time (T _{smin} to T _{smax})(t _s) | Preheating time | 60-120 sec | 60-120 sec |
| Average ramp-up rate(T _{smax} to T _p) | Average rising rate | 3°C/second max | 3°C/second max |
| Liquidous Temperature (T _L) | Liquid phase temperature | 183°C | 217°C |
| Time (t _L) Maintained Above (T _L) | Time above liquidus | 60-90 sec | 30-90 sec |
| Peak temperature (T _p) | Peak temperature | 220-235°C | 230-250°C |
| Average ramp-down rate (T _p to T _{smax}) | Average descent rate | 6°C/second max | 6°C/second max |
| Time 25°C to peak temperature | Time of 25 °C to peak temperature | 6 minutes max | 8 minutes max |

10.2 Reflow Soldering Curve

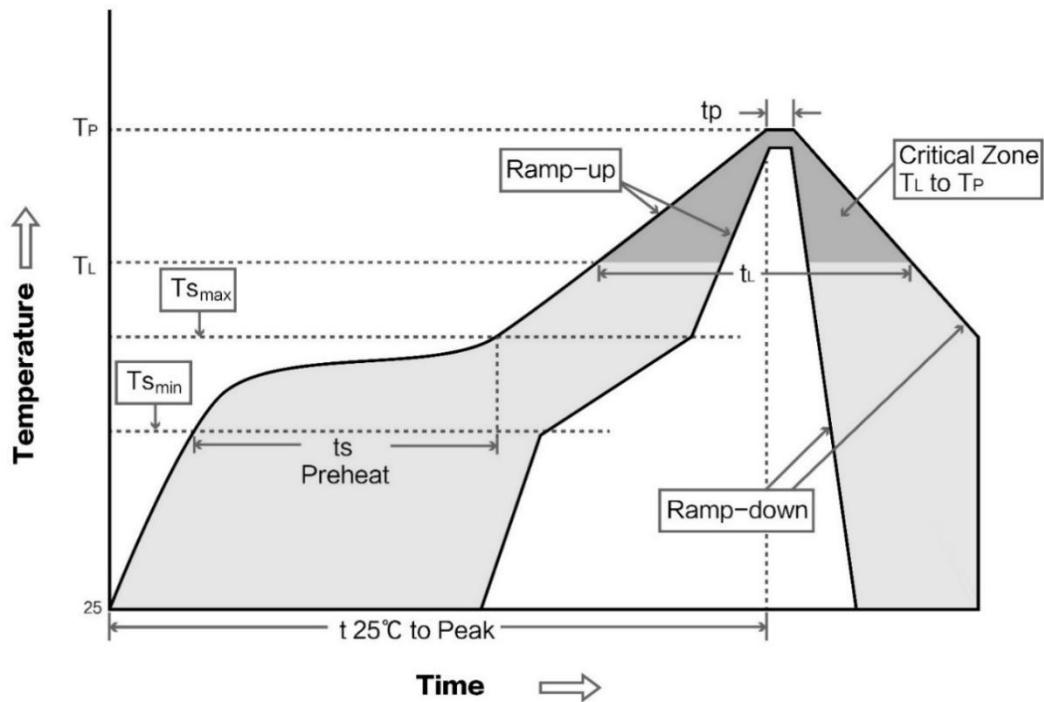


11. Related Model

| Model No. | Chip | Frequency Hz | Transmit power dBm | Test distance km | Air data rate bps | Packaging | Size mm | Antenna |
|-------------|------|--------------|--------------------|------------------|-------------------|-----------|---------|-----------------|
| E49-400T20S | - | 433M | 20 | 1 | 1.2k~200k | SMD | 26 * 16 | IPEX/Stamp hole |

12. Antenna guidance

13. Batch packaging

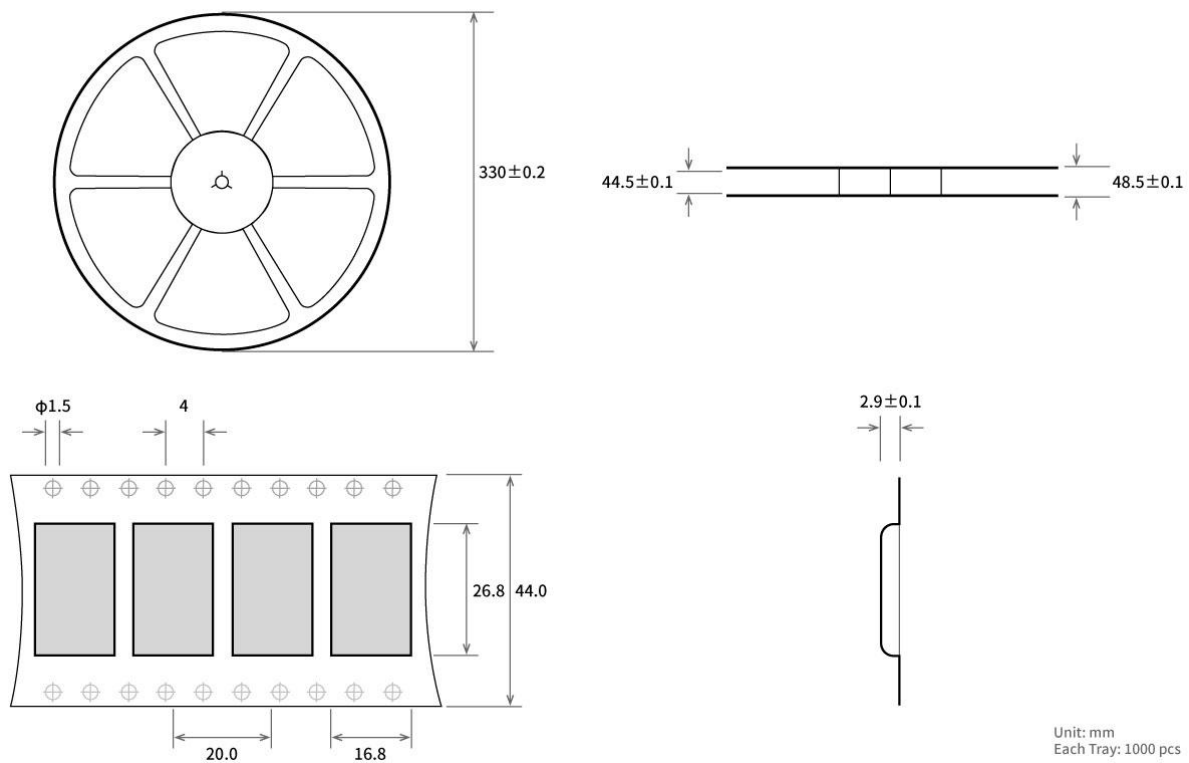

12.1 Antenna recommendation

Antennas play an important role in the communication process, usually low-quality antennas will greatly affect the communication system. Therefore, we recommend some antennas as supporting antennas of our company with excellent performance and reasonable price.

| Model No. | Type | Frequen cy Hz | Interface | Gain dBi | Height | Cable | Function feature |
|-------------------------------|----------------------|------------------|-----------|-------------|------------|-------|---|
| TX433-NP-4310 | Flexible PCB antenna | 433M | SMA-J | 2 | 43.8*9.5mm | - | Built-in flexible FPC antenna |
| TX433-JW-5 | Rubber antenna | 433M | SMA-J | 2 | 50mm | - | Flexible & omnidirectional |
| TX433-JWG-7 | Rubber antenna | 433M | SMA-J | 2.5 | 75mm | - | Flexible & omnidirectional |
| TX433-JK-20 | Rubber antenna | 433M | SMA-J | 3 | 210mm | - | Flexible & omnidirectional |
| TX433-JK-11 | Rubber antenna | 433M | SMA-J | 2.5 | 110mm | - | Flexible & omnidirectional |
| TX433-XP-200 | Sucker antenna | 433M | SMA-J | 4 | 19cm | 200cm | Sucker antenna, high gain |
| TX433-XP-100 | Sucker antenna | 433M | SMA-J | 3.5 | 18.5cm | 100cm | Sucker antenna, high gain |
| TX433-XP-300 | Sucker antenna | 433M | SMA-J | 6 | 96.5cm | 300cm | Car mounted sucker antenna, ultra-high gain |
| TX433-JZG-6 | Rubber antenna | 433M | SMA-J | 2.5 | 52mm | - | Short straight & omnidirectional |
| TX433-JZ-5 | Rubber antenna | 433M | SMA-J | 2 | 52mm | - | Short straight & omnidirectional |
| TX490-XP-100 | Sucker antenna | 490M | SMA-J | 50 | 12cm | 100cm | Sucker antenna, high gain |
| TX490-JZ-5 | Rubber antenna | 490M | SMA-J | 50 | 50mm | - | Short straight & omnidirectional |

Revision history

| Version | Date | Description | Issued by |
|---------|------------|-----------------|-----------|
| 1.0 | 2020-01-09 | Initial version | Ren |
| 1.1 | 2022-11-8 | Bug fixes | Yan |
| 1.2 | 2023-4-27 | Bug fixes | Yan |
| 1.3 | 2023-11-13 | Bug fixes | Bin |

About us

Sales hotline: 4000-330-990

Support: support@cdebyte.com

Website: <https://www.cdebyte.com>

Address: B5 Mould Park, 199# Xiqu Ave, High-tech District, Sichuan, China



Chengdu Ebyte Electronic Technology Co.,Ltd.